

Professional and Royal Diamond Instructions

Note: Use protective eye wear and work gloves for the installation.



Step 1.

Unravel the coiled edging out of the box and place a source of weight to keep down both ends of the edging. Only lay uncoiled edging on pavement and not on grass. If the temperature is below 65 degrees in direct sun, the edging will need to be exposed to the sun for a minimum of two days. If it is between 65-75 degrees in direct sun, 8 hours. In excess of 75 degrees in direct sun, three to four hours will be sufficient.

NOTE: This method will allow for EASIER installation, as the goal is to install the edging as a flat versus a coiled piece. Installing the product right from the packaging will create misery in installing the edging and affect the ability for the edging to stay in the ground.



Step 2:

Dig a 4-5 inch trench along lawn edge



Step 3:

Sink edging into trench with the bottom "V" lip facing the rocks or mulch



Step 4:

Secure edging with stakes facing the grass as indicated



Step 5:
Sink stake through the fin every 5 feet at a 45 degree angle




Step 6:
For connecting two sections of edging together, cut five inches from one of the sections of bead.



Attach both sections with a connecting plug.



Attach both sections with a connecting plug.

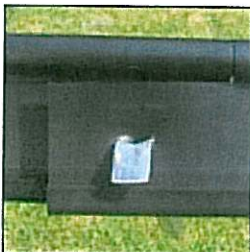

Hammer the anchor stake through both sections of edging.



Step 7:
Backfill and pat down firmly